SoundPlus[®] Four-Channel Infrared Receiver Model WIR RX22-4, 2.3-3.8 MHz

Instructions For Use & Care

SAFETY INFORMATION

Hearing Safety:



This product is designed to amplify sounds to a high volume level which could potentially cause hearing damage if used improperly. To protect your hearing and the hearing of others:

- Make sure the volume is turned down before putting on the earphone or headphone before adjusting the volume to a comfortable level.
- 2. Set the volume level at the minimum setting that you need to hear.
- Do not allow children or other unauthorized persons to have access to this product.

BATTERY SAFETY & DISPOSAL



Do not attempt to recharge disposable batteries, which may explode, release dangerous chemicals, cause burns, or other serious harm to the user or product.

PACEMAKER SAFETY



- <u>Before</u> using this product with a pacemaker or other medical device, consult your physician or the manufacturer of your pacemaker or other medical device.
- If you have a pacemaker or other medical device, make sure that you are using this product in accordance with safety guidelines established by your physician or the pacemaker manufacturer.



RECYCLING INSTRUCTIONS



Help Williams Sound protect the environment! Please take the time to dispose of your equipment properly.

Product Recycling:

Please do NOT dispose of your Williams Sound equipment in the household trash. Please take the equipment to a electronics recycling center; OR, return the product to the factory for proper disposal.

Battery Recycling:

Please do NOT dispose of used batteries in the household trash. Please take the batteries to a retail or community collection point for recycling.

9/15/06

OPERATING INSTRUCTIONS

 Install AA batteries: Open the battery compartment by lifting the tab on the back of the receiver with your finger. To remove depleted batteries, pull up on the fabric strip.



IMPORTANT: If Alkaline (nonrechargeable) batteries are being installed, slide the battery selection switch in the battery compartment to the "Alkaline" position. See Fig. A above. If installing NiMH (or rechargeable) batteries, slide the battery selection switch to the "NiMH" position.

Press the batteries into place over the fabric strip. Be sure to observe proper polarity (+/-). Damage due to improper battery installation may void the warranty on the product. close the battery door. LED will flash when the batteries are getting low; continue to use until the sound becomes weak or distorted, or the unit quits operating, then replace or recharge batteries.

FIG B: WIR RX22-4 Control Panel



- Plug the earphone, headphone or 2. neckloop into the headphone jack on the receiver's control panel.
- Turn the receiver on by rotating the 3. volume control knob. The ON indicator should illuminate RED
- 4. Select the channel you'd like by turning the channel selector knob on the control panel. Choose between 4 standard frequencies:

2.3 MHz (Ch.1), 2.8 MHz (Ch. 2), 3.3 MHz (Ch.3), or 3.8 MHz (Ch. 4). Important: Make sure the receiver frequency matches the transmitter frequency.

IMPORTANT: Make sure the "SoundPlus IR" artwork on the front of the unit is not covered up while in use. Do not place the receiver in a pocket or purse or it will not work properly.

5 Adjust the volume to a comfortable listening level

6. To turn the receiver off, rotate the volume control knob to the left until it clicks off. The ON indicator should not be lit. To prolong the battery life of the unit, turn the receiver off when it is not in use

Battery Information

The WIR RX22-4 Receiver can use two (2) disposable AA batteries (BAT 001) or two (2) AA rechargeable batteries (BAT 026). Note: The BAT 026 provides longer life than other rechargeable batteries. Do not substitute other rechargeable batteries and chargers.

Low Battery Indicator

The "On" indicator on top of the unit will flash to indicate low battery.

Recharging

If the WIR RX22-4 is equipped with rechargeable batteries, up to 12 units can be charged at one time in the optional CHG 3512 multi-charger. Refer to MAN 116 charger instruction sheet for complete charging instructions. For ordering information, please contact Williams Sound at 800-843-3544

Earpad Cleaning

Do not immerse the earphone in water or other cleaning agent. Foam pads may be removed and washed with a mild laundry soap solution, rinse thoroughly, and airdried. You may also opt to purchase new foam pads. Call the factory for more information: 800-843-3544

LANYARD CLIP INSTALLATION



For hands free operation of the WIR RX22-4 receiver, use the provided lanyard clip to hang the unit around your neck.

To Install: Position the lanyard clip on the rear of the WIR RX22-4 receiver as shown in FIG C. Turn the lanyard clip 180° left or right as shown in FIG D. The lanyard clip is now installed and ready for use.

To Remove: Turn the lanyard clip 180° so the edge points toward the top of the unit as shown in FIG C. Gently pull the lanyard clip away from the unit to remove.

LIMITED WARRANTY

Williams Sound products are engineered, designed and manufactured under carefully controlled conditions to provide you with many years of reliable service. Williams Sound warrants the WIR RX22-4 receiver against defects in materials and workmanship for FIVE (5) years. During the first five years from the purchase date, we will promptly repair or replace the WIR RX22-4 receiver.

Earphones, headphones, batteries, cables, carry cases, and all other accessory products carry a 90-day warranty.

WILLIAMS SOUND HAS NO CON-TROL OVER THE CONDITIONS UNDER WHICH THIS PRODUCT IS USED. WILLIAMS SOUND. THEREFORE, DISCLAIMS ALL WARRANTIES NOT SET FORTH ABOVE, BOTH EXPRESS AND IMPLIED, WITH RESPECT TO THE WIR RX22-4 RECEIVER, INCLUD-ING BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MER-CHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. WILLIAMS SOUND SHALL NOT BE LIABLE TO ANY PERSON OR ENTITY FOR ANY MEDICAL EXPENSES OR ANY DIRECT, INCIDENTAL OR CONSEQUEN-TIAL DAMAGES CAUSED BY ANY USE, DEFECT, FAILURE OR MALFUNCTION OF THE PROD-UCT. WHETHER A CLAIM FOR



7//

SUCH DAMAGES IS BASED UPON WARRANTY, CONTRACT, TORT OR OTHERWISE. THE SOLE REMEDY FOR ANY DEFECT, FAILURE OR MALFUNC-TION OF THE PRODUCT IS REPLACE-MENT OF THE PRODUCT. NO PERSON HAS ANY AUTHORITY TO BIND WILLIAMS SOUND TO ANY REPRE-SENTATION OR WARRANTY WITH RESPECT TO THE WIR RX22-4 RECEIV-ER. UNAUTHORIZED REPAIRS OR MODIFICATIONS WILL VOID THE WARRANTY.

The exclusions and limitations set out above are not intended to, and should not be construed so as to contravene mandatory provisions of applicable law. If any part or term of this Disclaimer of Warranty is held to be illegal, unenforceable or in conflict with applicable law by a court of competent jurisdiction, the validity of the remaining portions of this Disclaimer of Warranty shall not be affected, and all rights and obligations shall be construed and enforced as if this Limited Warranty did not contain the particular part or term held to be invalid. If you experience difficulty with your system, call Toll-Free for Customer Assistance:

1-800-843-3544

If it is necessary to return the system for service, your Customer Service Representative will give you a Return Authorization Number (RA) and shipping instructions.

Pack the system carefully and send it to:

Williams Sound Corp. Attn: Repair Dept. 10321 West 70th Street Eden Prairie, MN 55344



//

SYSTEM SPECIFICATIONS FOUR-CHANNEL INFRARED RECEIVER, MODEL WIR RX22-4

Receiver Style:	Body-Pack, dual-lens detector, lanyard
Size:	4.1" L x 2.85" W x 1.2" H (104.1 mm x 72.4 mm x 30.4 mm)
Weight:	4.5 oz (127 g) with batteries
Color and Material:	Black
Lanyard:	3 ft (.91 m), allows receiver to be worn around the neck
Operating Temperature:	-10° C to +50° C
Battery Type:	2 x AA, alkaline (BAT 001) or NiMH (BAT 026)
Battery Life:	Alkaline: 60 hours, NiMH: 30 hours/charge
Battery Drain:	25 mA, nominal
Charging Contacts:	For use only with CHG 3512
Carrier Frequency:	Channel 1: 2.3 MHz, Channel 2: 2.8 MHz
	Channel 3: 3.3 MHz, Channel 4: 3.8 MHz
De-Emphasis:	50 uS
FM Deviation:	±50 kHz
Signal-to-Noise Ratio:	60dB min.
Squelch:	Receiver squelches (mutes) at 40 dB S/N ratio
Frequency Response:	25 Hz to 16 KHz, +1 dB, -3 dB, electrical response
Total Harmonic Distortion	: Less than 1%, electrical response
Controls:	ON/OFF/VOLUME: combination thumbwheel knob
	Channel Selector: four-position rotary switch
Indicators:	Red LED "ON" indicator, flashes to indicate Low battery
Audio Output Jacks:	3.5 mm stereo mini phone jack Accepts 3.5 mm mono or
	stereo phone plug
Audio Output Power:	15 mW max at 32 Ω
Acoustic Output:	125 dB SSPL90 with HED 002; 110 dB SSPL90 w/ EAR 013
Sensitivity:	Better than 1 nW/cm ² for 40 dB signal-to-noise ratio
Approvals:	CE, FCC, RoHS, WEEE
Warranty:	5 years on receiver, 90 days on accessories
Compatible Headphones/	Mono or stereo, 8-32 ohms, 3.5 mm mini phone plug,
Earphones:	HED 021, HED 026, EAR 013, EAR 014, EAR 022, NKL 001

NOTE: SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE



10321 West 70th St., Eden Prairie, MN 55344 U.S.A. 800.843.3544 | 952.943.2252 | FAX: 952.943.2174 www.williamssound.com